

# **OPERATION MANUAL**



# EXTENSION DEVICE (STAINLESS STEEL)

W1880Z


### CATALOG

1 Description	1
1 .1 Structure	
1.2 Technical Parameter	2
2 Installation Instructions	
3 Notice	5
3.1 Safety Instructions	5
3. 2 Instructions	

# **1 Description**


The extension device is a tool of the stair climber, which plays a role in widening the bearing range of the stair climber and improving the stability of the loading goods.ZW4170D,ZW4200D,ZW7170G,ZW7170E,ZW7200G.

#### 1.1 Structure

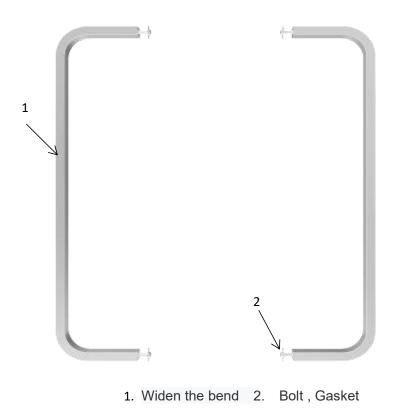

### **1.2 Technical Parameter**


overall dimension	40mm*180mm*800mm
net weight	2KG (two)
The width widened by	Add 120mm to the left and right
installing the machine	sides respectively

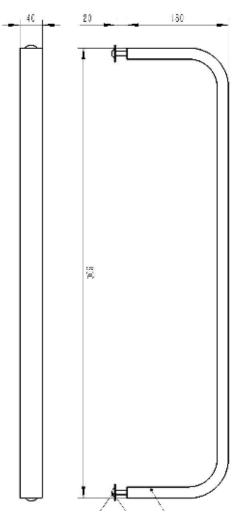


# 2 Installation Instructions

1. Find the mounting hole on the stair climber;

2. Twist the bolts, put the stair climber between the bolts and the extension device, and assemble the stair climber and the extension device by the bolts. Notice the direction of the small screw head inward.

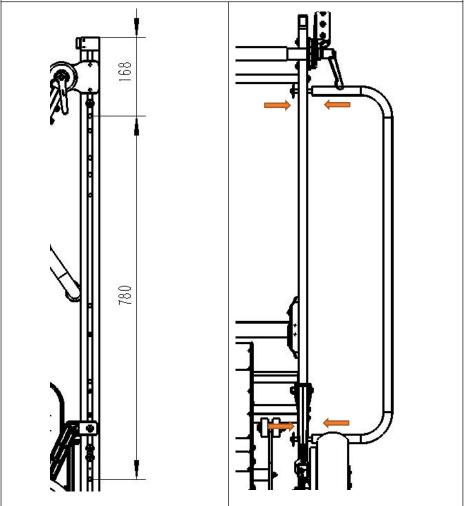

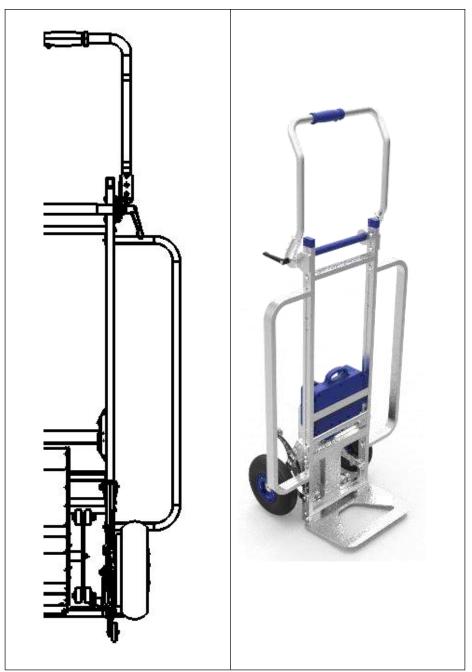

### **3 Notice**

#### 3.1 Safety Instructions

Read the user manual and pay attention to the safety instructions before operation.

> Only the trained person with physical and mental health is allowed to operate powered stair climber.


> Do not use the machine in rainy day, moist & slippery condition, as well as on the snow or ice, which may react against the brake, causing side-slip or other potential risks.

> Make sure you have read the user manual of powered stair climber and used powered stair climber expertly.

> If the powered stair climber is before operation damaged, stop immediately.

> Do not use the stair climber to transport loads that exceed the maximum loading capacity.

#### 3.2 Instructions for Use

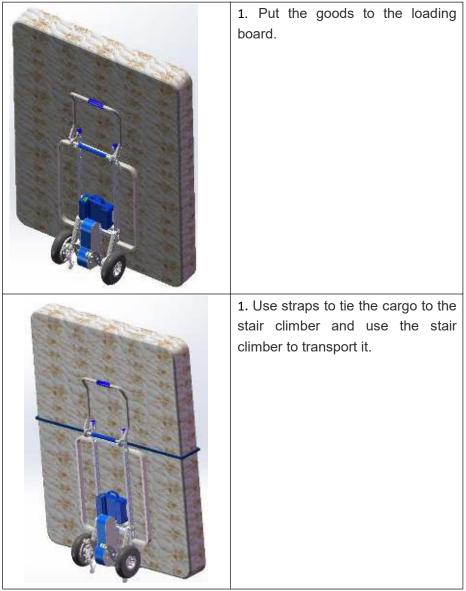





www.xsto.net \$\begin{bmatrix} +86-760-28207258



😟 Floor 1, Building C, 555 Plant. Ma'an Cun Rd, Cuiheng New District, Zhongshan City, Guangdong, China